



Center Console Trash Bag

100N10

Set Up
Video:



www.rightlinegear.com/setup.html

Prepare The Center Console Trash Bag

1-Open the Center Console Trash Bag and push outwards on the bag to give it shape (Fig 1).



Fig 1

2-Pull the drawstring top of the bag over its sides (Fig 2).



Fig 2

NOTE: THE BAG IS LEAKPROOF; IT IS NOT NECESSARY TO ADD A PLASTIC TRASH LINER.

Attach The Center Console Trash Bag

Front Opening Center Console Armrests

1-Open the center console armrest (Fig 3).

2-Route the straps around the center console's armrest, connect the quick release buckle, and tighten the strap (Fig 4).



Fig 3



Fig 4

3-Adjust the elastic strap guide to hold the loose end of the strap (Fig 5).



Fig 5

4-Close the center console armrest over the strap and buckle.

Side Opening Center Console Armrests

1-Open the center console armrest (Fig 6).

2-Connect the ends of the strap with the quick release buckle and adjust the buckle on the strap so that it is centered across the width of the Trash Bag (Fig 7); use the elastic strap guide to hold the loose end of the strap.



Fig 6



Fig 7

3-Place the quick release buckle inside the center console, (Fig 8) and close the center console armrest over the strap and buckle.



Fig 8

Use The Center Console Trash Bag

1-Place drink cups, banana peels, napkins, food wrappers, and any additional trash in the trash bag (Fig 9).

2-Pull the drawstring top over the trash and tighten the draw string to contain the trash and smells (Fig 10).



Fig 9



Fig 10

3-Remove and clean out the Center Console Trash Bag with mild soap and water when necessary.

1 Year Manufacturer's Limited Warranty
www.rightlinegear.com/product-warranty.html